




Now Available
HE Bootless Rough-In Kit

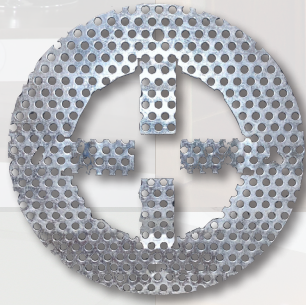

New from Energy Saving Products Ltd.

Now available is a new metal vent fitting that allows contractors to fit HE Vent Plates into tight-fitting wall and ceiling applications where our Rough-In Boot cannot fit.

How to Install

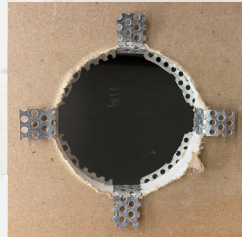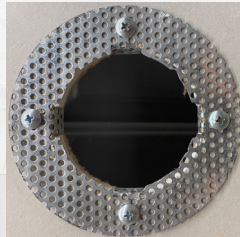

- 1)** Bore a 3 1/4" hole in the surface (plate to be affixed to drywall/surface)
- 2)** Place plate over hole and bend 4 tabs 90° into the hole
- 3)** Reach inside and bend tabs over to secure flange in place

- 4)** Apply four 3/4" screws in a cross pattern to the surface (Do not over tighten screws, only secure)
- 5)** Pull connector tube through hole and flange (6" connector tube) and attach vent plate to connector tube
- 6)** Push vent plate into place and use provided tool to twist slightly and lock in place

Call a listed Distributor in your area to order today.