


HE Bootless Rough-In Plate

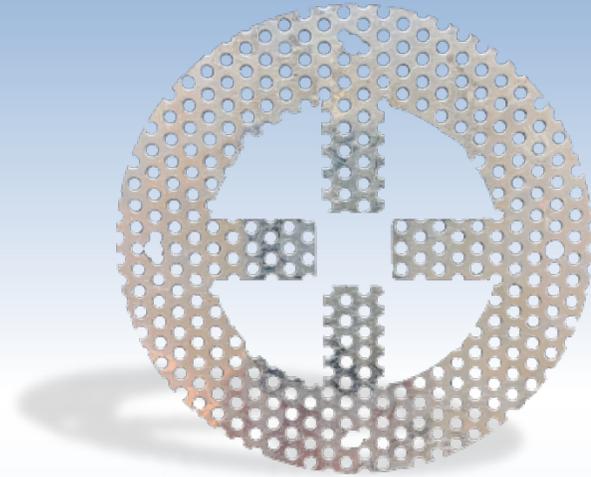


Now Available

This metal vent fitting allows for the installation of HE Vent Plates into tight-fitting wall and ceiling applications where our Rough-In Boot cannot fit.

HE Bootless Rough-In Plate

Each Kit = 10 Applications:

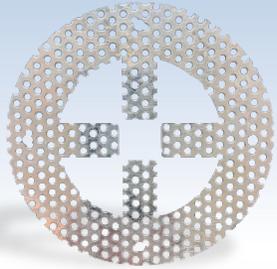


Bootless Rough-In Plate (x10)



HE Tubes – 6" Lengths (x10)



Metal Plate Key (x1)

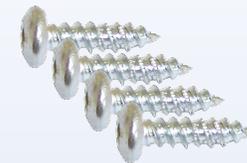

3/4" Screws (x40)


HE Bootless Rough-In Plate

How to Install:

Drill a 3 1/4" hole in the surface where plate will be installed



3 1/4" Hole Saw

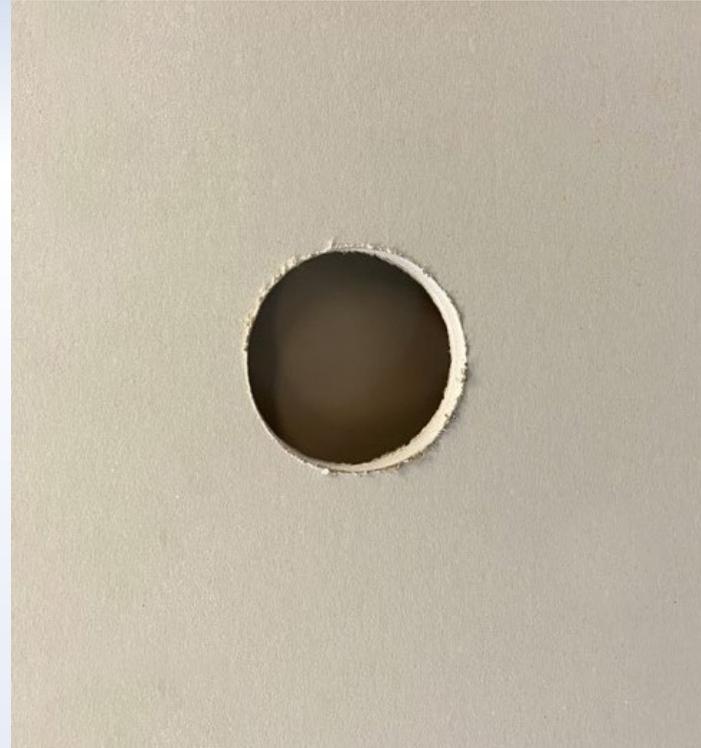

Duct Board, Drywall etc.

HE Bootless Rough-In Plate

How to Install:

Place Bootless Plate over hole



HE Bootless Rough-In Plate

How to Install:


Push to bend 4 tabs 90° into hole to hold flange in place



HE Bootless Rough-In Plate

How to Install:

Push to bend 4 tabs 90° into hole to hold flange in place

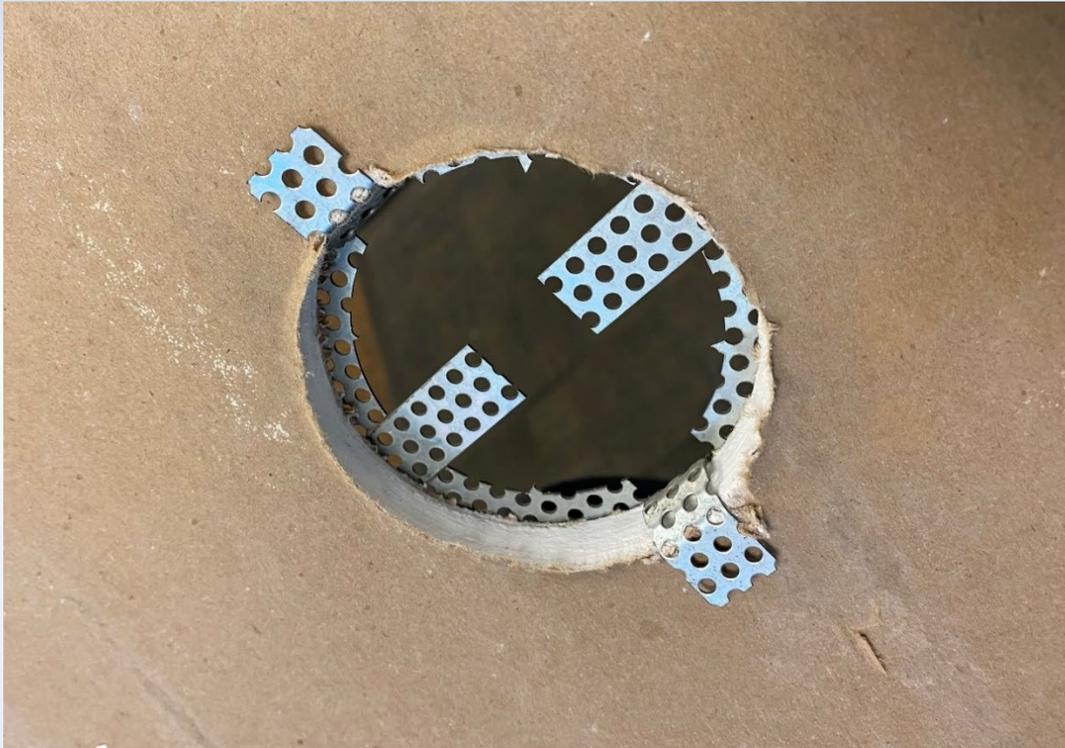

View from Underside

HE Bootless Rough-In Plate

How to Install:

Secure plate with four $\frac{3}{4}$ " screws in a cross pattern. Do not over tighten.



HE Bootless Rough-In Plate

How to Install:


Attach 6" pipe to flexible duct, screw and tape pipe in place



HE Bootless Rough-In Plate

How to Install:

With flex secured, insert pipe through the bootless plate from the inside

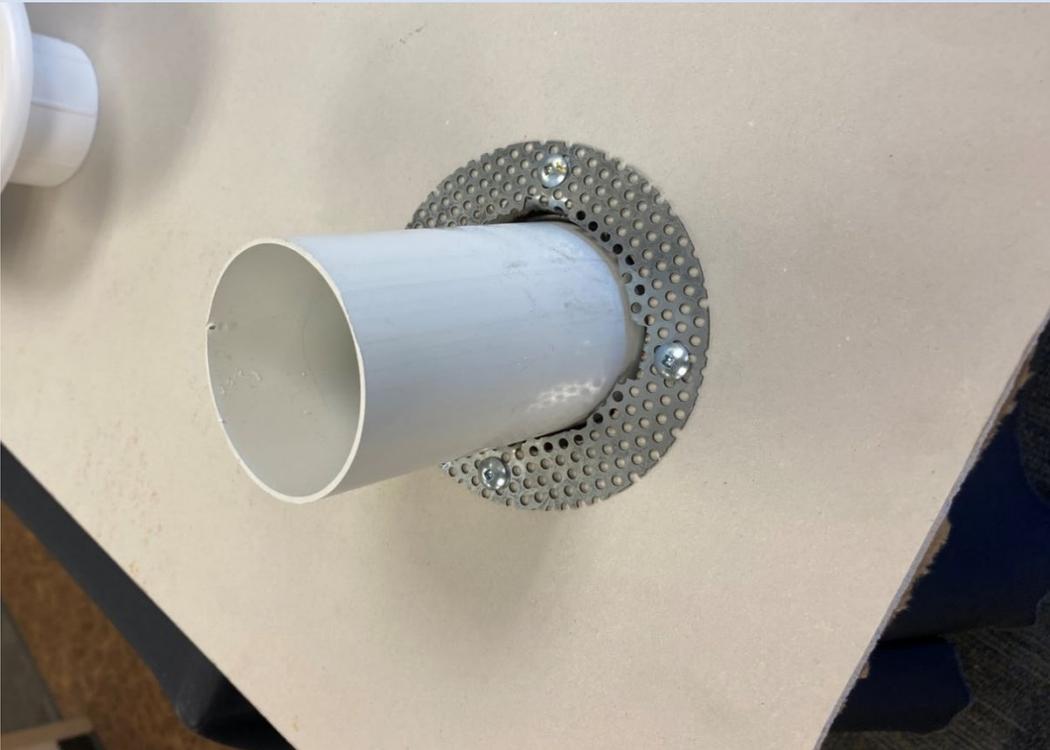

View from Underside

HE Bootless Rough-In Plate

How to Install:

Install vent plate onto pipe and push into place



HE Bootless Rough-In Plate

How to Install:

Take out center grill and push vent flush against surface



HE Bootless Rough-In Plate

How to Install:

Insert metal vent key into hole of vent plate, fitting into grooves



HE Bootless Rough-In Plate

How to Install:

Insert screwdriver through 2 holes on metal key and twist slightly to lock into place



View from Underside

HE Bootless Rough-In Plate

How to Install:

Re-insert removable grill into vent plate



Finished!